FARMTECH

FarmTech Solutions, Inc. · Choteau, Montana · USA

RTK Precision Quick Start

RTK corrections for your receivers, from FarmIQ™

Version	v1.0
Revised	2026-11-22
Applies to	The RTK Precision tile on FarmIQ™ (farmiq.us), and any GPS receiver with NTRIP input

RTK Precision

The screen at a glance

Your connections

On the FarmIQ dashboard, tap the **RTK Precision** tile. Once you have RTK, it opens your connection details. Prices are left out of the pictures in this guide; the page shows the current ones.

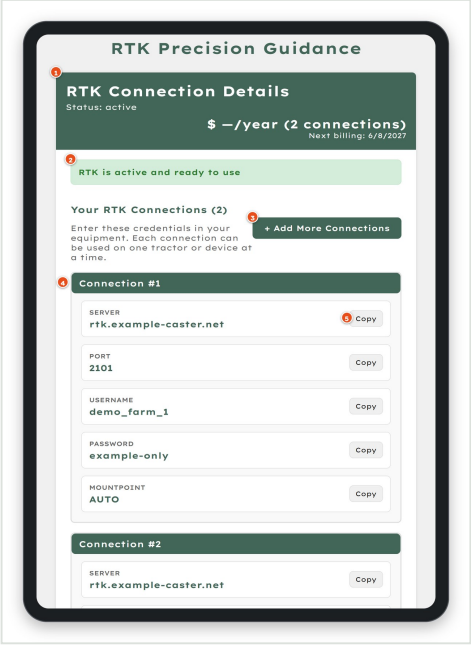

Your RTK connections, numbered.

#	Button or area	What it does
1	RTK Connection Details	Your status, your plan and the Next billing date.
2	Status	RTK is active and ready to use, or Free Trial Active with the days left.
3	+ Add More Connections	Buy more connections.
4	Connection #1	One card for each connection, with its Server, Port, Username, Password and Mountpoint.
5	Copy	Copy that one setting, ready to paste. It says Copied!.

Signing up

Until you have RTK, the same tile shows the plans.

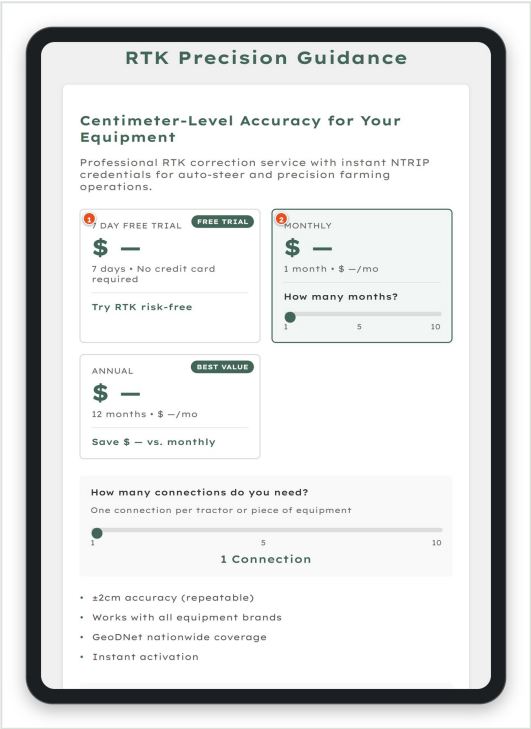

Signing up for RTK, top of the page, numbered.

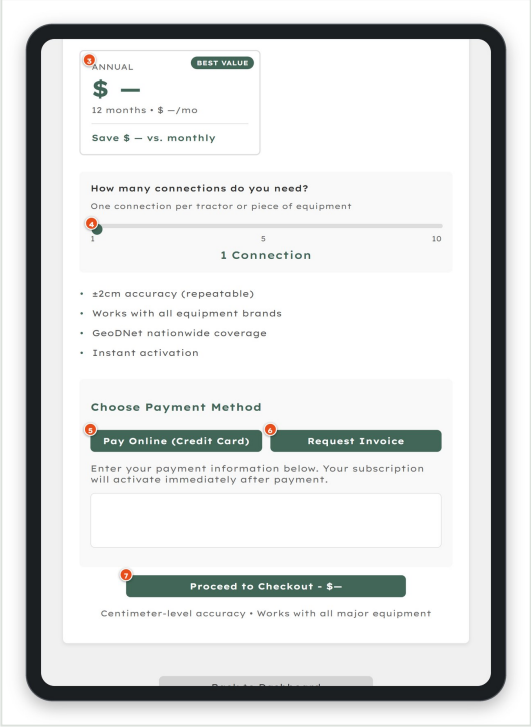

Signing up for RTK, further down, numbered.

#	Button or area	What it does
1	7 Day Free Trial	Try RTK for 7 days on one connection, with no card. Shows only if your account has never had a trial.
2	Monthly	Pay by the month. Choose how many months with How many months? (1 to 10).
3	Annual	Pay for a year.

#	Button or area	What it does
4	How many connections do you need?	1 to 10 connections: one for each receiver running at the same time.
5	Pay Online (Credit Card)	Pay now by card. RTK starts as soon as the payment goes through.
6	Request Invoice	RTK starts now and we send you an invoice.
7	Proceed to Checkout	Shows the total. Says Start Free Trial when the trial is picked.

Quick reference

To do this	Do this
Try RTK free	7 Day Free Trial, Start Free Trial, Start Trial
Buy RTK	Pick Monthly or Annual, the number of connections and how to pay, then Proceed to Checkout
See your settings	The RTK Precision tile
Copy a setting	Copy beside it
Set up a receiver	Type the five settings into the receiver's NTRIP settings (see Setting up a receiver)
Add receivers	+ Add More Connections